



## Model 6808 Basic Operating Instructions

These Instructions must be framed and displayed next to the 6808 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Operation	Task to Perform
Silence Alarms and Troubles	Press SILENCE and then enter a code if prompted. The Silence LED will light.
Reset Alarms	Press RESET and then enter a code if prompted.
View Alarms, Supervisories, and Troubles	For each type of condition press the Up or Down button associated for Alarms, Supervisories, or Troubles. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"> FIRE: ALARM SUPR TRBL  CO: ALARM SUPR  SYS: TRBL </div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> FIRE: ALARM  Waterflow Sw  Zone_1  1 of 1                      Info&gt; </div> </div>
View Point Status	<ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Press 2 to select Point Functions.</li> <li>3. Press 2 to select Point Status.</li> <li>4. Select the desired module by using the Up or Down button. Then press ENTER.</li> <li>5. Enter the point number.</li> </ol>
Conduct a Fire Drill	<p>Hold the DRILL button and then enter a code if prompted. OR</p> <ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Then Press 1 to select System Tests.</li> <li>3. Press 1 to select Fire Drill.</li> <li>4. Press ENTER to start the fire drill. Press ENTER to end the fire drill.</li> </ol>
Check Detector Sensitivity	<ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Press 2 for Point Status.</li> <li>3. From the list that displays, select the SLC module where the desired point is located.</li> <li>4. The fourth line of the display shows the sensitivity status.  “NORMAL” means the detector is in compliance with NFPA 72.  “CAL MAINT” means the detector is in compliance with NFPA 72 but maintenance should be performed soon.  “CAL TRBLE” means the detector is not in compliance with NFPA 72.</li> </ol>
Set Time and Date	<ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Press 4 to select Set Time &amp; Date.</li> <li>3. Make changes in the fields on the screen as necessary.</li> <li>4. When the time and date are correct, press ENTER.</li> </ol>
Enable / Disable a Point	<ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Press 2 to select Point Functions.</li> <li>3. Press 1 for Disable / Enable Pt</li> <li>4. Press 7 for Disable / Enable Pt.</li> <li>5. Use the Up or Down button to move through the list. Then press ENTER to select the module where the desired point is located.</li> <li>6. Enter the point or circuit number that you want to disable/enable.</li> <li>7. Press the right arrow key to toggle between NORMAL (enable) or DISABLE.</li> </ol>
View Event History	<ol style="list-style-type: none"> <li>1. Login to the panel.</li> <li>2. Press 3 to select Event History.</li> <li>3. Press the Up or Down button to view events in the history buffer.</li> </ol>
For Service Call:	MAINE STATE SECURITY OR PINE STATE FIRE & SECURITY INC AT 207-200-3554